


HD Range Wheelclamp Instructions



Diagram

Rear View

Side View

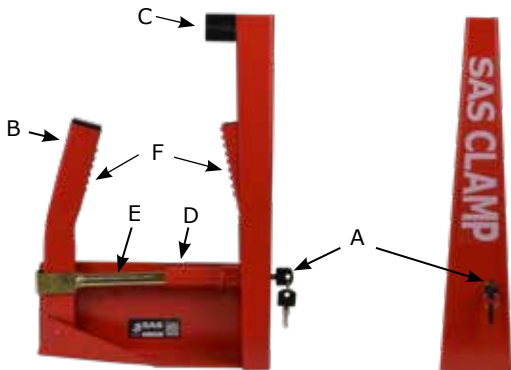

Specific models may vary slightly from model shown

Maintenance - IMPORTANT

On a regular basis for optimum performance, and always before fitting to your wheel for long term storage:

- Clean and lubricate moving parts.
We recommend using SAS mint general protectant spray to lubricate and protect the locks of all our products.
- Unwind the adjusting screw behind 'A' and remove pin 'E' - Grease the pin and bolt, then reassemble. We recommend using SAS corrosion block waterproof grease.



Spare Parts

Replacement parts can be ordered at your local SAS dealer, or online at www.sasproducts.com

SAS HD Range Fitting Instructions

1. Insert the key into the lock, ensuring that the key fits all the way into the lock, leaving only 5mm of key shaft exposed. Turn key and remove the lock from the front arm at "A".
2. Insert allen key into bolt inside socket "A".
3. Turn the allen key in an anticlockwise direction to open rear arm "B" to sufficient distance to enable the clamp to be placed over the tyre.
4. Locate the tube "C" over the wheel nut, move the clamp down until the tyre comes into contact with the lower frame marked "D". The teeth on the arms of the SAS clamp "F" should now be in line with the wheel rims (It is not essential for the base of the clamp to be in contact with the ground).
5. Using the allen key, AND HOLDING THE CLAMP IN POSITION turn the key in a clockwise direction until the clamp is locked tight onto the wheel, then replace the lock.
6. Replace the lock by inserting lock into lock housing, first ensuring that the key is inserted all the way into the lock, leaving only 5mm of key shaft exposed.

IMPORTANT NOTICE:

1. For maximum security it is essential to cut the front tube "C" down to allow the clamp to fit snugly to your particular wheel contour. This cuts possible leverage space to a minimum.
2. For wheels with deep-set nuts/bolts extension tubes are available which lengthen the tube "C".
3. For large rear hubs, the rear arm can be trimmed down to fit snugly onto the rear rim.

IT IS IMPERATIVE THAT THE CLAMP IS FITTED CORRECTLY FOR EFFECTIVE PROTECTION.



✗ too loose, remove large gap

✓ tight to tyre

If required turn the wheel to ensure the wheel is tight against the frame.

About SAS

For over 38 years, SAS has been dedicated to designing and manufacturing reliable security solutions to protect your most valuable assets. Our robust products are rigorously tested and we are proud to say are trusted by owners, insurers, and industry experts alike. We offer a full range of security solutions, including **wheel clamps, hitch locks, garage locks, and other universal security products.**

Visit the SAS website to explore our full range of security products and SECURE YOUR WORLD TODAY!

Hitch Locks

Lock Hitched - Easy to secure caravan to vehicle when stationary.

Lock Unhitched - Quickly secure caravan when parking uncoupled from vehicle.



Wheel Clamps

Stop unauthorised movement of your Caravan, Motorhome, Trailer or Vehicle by securing the wheel.



Security Posts

Heavy Duty removable security posts. Increase security with optional tow ball bracket to secure caravan/trailer to post.



Chains & Padlocks

Extensive range of chains and padlocks to restrain your Caravan.



Ground Anchors

Simply create an anchor point to secure your chained Caravan to deter theft.



SAS Security Products Ltd

+44 1444 675889

sales@sasproducts.com

www.sasproducts.com

